

## StrainSmart® Data Acquisition System

### FEATURES

- From 5 to 1200 input channels—can be configured as needed at any time
- Inputs accepted from strain gages and strain-gage-based transducers (Model 5110A), thermocouples (Model 5120A), sensors with high-level voltage output (Model 5130B), and LVDTs (Model 5140A)
- Built-in bridge completion for 120-, 350-, and 1000-ohm strain gages
- Scanning and recording intervals as short as 0.02 seconds for up to 1200 inputs
- Stable, accurate, low-noise signal conditioning
- Available with PCI and PCIe hardware Interface

### DESCRIPTION

System 5000's Model 5100B Scanners acquire test data within 1 millisecond from up to 1200 channels at scan intervals as short as 0.02 seconds. This translates into more accurate test results, and the ability to capture data under static loading conditions immediately before failure.

Sensor connections are quickly made to the cards at the rear of each scanner in System 5000. Strain gage cards include built-in bridge completion for quarter and half bridges, and a constant voltage power supply for 0, 0.5, 1, 2, 5, and 10 VDC bridge excitation.

System 5000's instrumentation hardware is designed to incorporate all the features required for precision strain measurement under static loading conditions, while maintaining flexibility and ease of use. A system can be configured with as few as 5, and as many as 1200, sensors. Since each Model 5100B Scanner can function independently, your System 5000 components can easily be configured with StrainSmart software for each test requirement.

### MODEL 5100B SCANNER SPECIFICATIONS



The Model 5100B Scanner is sized for standard 19-in (483-mm) instrumentation racks. Cabinets are available for various system configurations for bench-top or field use.

Since each Model 5100B Scanner can function independently, your System 5000 components can be easily configured for each test requirement. A 100-channel system, for example, can be used as five independent 20-channel systems simply by purchasing additional interface hardware installations.



### INPUTS

Accepts up to four cards (five channels per card and up to 20 channels per scanner).

### A/D CONVERTER

16-bit (15-bit plus sign) successive approximation converter. Usable resolution is typically 15 bits. 40  $\mu$ s total conversion time per reading.

### SCAN RATE

1 ms per scan. Fifty complete scans per second typical usage. Concurrent scanning for all scanners.

Input channels in each single scanner are scanned sequentially at 0.04-ms intervals and stored in random access memory within a 1-ms window.

### DIGITAL OUTPUT

NO and NC relay contacts (500 mA at 30 VDC into a resistive load)

### OPERATIONAL ENVIRONMENT

#### Temperature

-10° to +50°C

#### Humidity

Up to 90% RH, non-condensing

### SIZE

3.5 H x 19 W x 16 D in (89 x 483 x 381 mm)

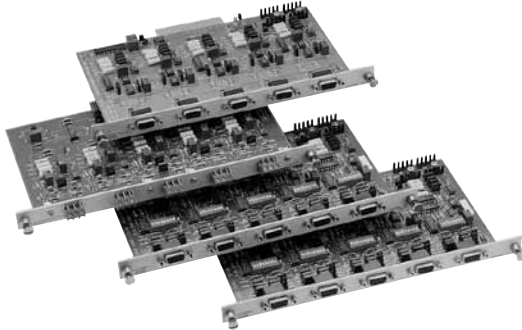
### WEIGHT

16 lb (7.25 kg)

### POWER

115 or 230 VAC user-selectable  
±10% of setting; 50/60 Hz; 140W max

## StrainSmart® Data Acquisition System

**SENSOR CARD SPECIFICATIONS**

Strain gages, strain-gage-based transducers, thermocouples, LVDTs, potentiometers and other transducers can be intermixed in multiples of 5 by choosing the appropriate sensor card.

**MODEL 5110A STRAIN GAGE CARD****CHANNELS**

Five per card

**INPUTS****Strain Gages**

120 $\Omega$ , 350 $\Omega$ , 1000 $\Omega$  quarter bridges; 60 $\Omega$  to 5000 $\Omega$  half and full bridges

Jumper-selectable completion resistors  
(0.02%  $\pm$ 3 ppm/ $^{\circ}$ C typ)

**Measurement Range**

Normal range mode:  $\pm$ 16,380  $\mu\epsilon$

High range mode:  $\pm$ 163,800  $\mu\epsilon$

Low range mode:  $\pm$ 1638  $\mu\epsilon$

**Resolution**

Normal range mode: 1  $\mu\epsilon$

High range mode: 10  $\mu\epsilon$

Low range mode: 0.1  $\mu\epsilon$

**Strain Gage Based Transducers**

60 $\Omega$  to 5000 $\Omega$  impedance

**Measurement Range**

Normal range mode:  $\pm$ 8 mV/V

High range mode:  $\pm$ 80 mV/V

Low range mode:  $\pm$ 0.8 mV/V

**Resolution**

Normal range mode: 0.5  $\mu$ V/V

High range mode: 5.0  $\mu$ V/V

Low range mode: 0.05  $\mu$ V/V

**Input Impedance**

220 M $\Omega$  each input

**Input Protection**

$\pm$ 40V

**Source Current**

$\pm$ 25 nA max.

**Input Connector**

Nine-pin D-sub style

**AMPLIFIER****Zero Temperature Stability**

$\pm$ 1.2  $\mu$ V/ $^{\circ}$ C RTI,  $\pm$ 100  $\mu$ V/ $^{\circ}$ C RTO, after 30-minute warm-up

**Gain Accuracy and Stability**

$\pm$ 0.1% at +23 $^{\circ}$ C;  $\pm$ 100 ppm/ $^{\circ}$ C

**Common-Mode Voltage**

$\pm$ 10V

**Common-Mode Rejection (DC to 5 Hz)**

100 dB typical

**System Noise (Normal Mode Operation)**

$\pm$ 2  $\mu\epsilon$  typical ( $\pm$ 4 ADC counts)

**System Coarse Balance Range**

$\pm$ 100% of measurement range (typically  $\pm$ 16,383  $\mu\epsilon$ )

**CALIBRATION**

Two shunt calibration points are available on each channel

Switch-selectable

Calibration switches, A and B, are software selectable

**EXCITATION**

0.0, 0.5, 1.0, 2.0, 5.0, and 10.0 VDC

Software-programmable

**Accuracy**

$\pm$ 5 mV typical

**Current**

250 mA max. (50 mA per channel)

Over-current protected

**Load Regulation**

<0.05% of full scale for a load variation of 10% to 100% of full load

**Temperature Stability**

Better than  $\pm$ 0.005%/ $^{\circ}$ C

**FILTER****Type**

Four-pole Butterworth

**Cutoff Frequency (-3 dB)**

5 Hz

StrainSmart® Data Acquisition System

**MODEL 5120A THERMOCOUPLE CARD**

**CHANNELS**

Five per card

**INPUTS**

Thermocouple types J, K, T, E, R, S, and B  
Built-in electronic cold-junction compensation  
Software-selectable

**Open sensor detection:**

Input Impedance: 22 MΩ each input  
Input Protection: ±40V  
Source Current: ±0.5 nA typical; ±5 nA max

**Input Connector**

Removable three-position screw terminal

**AMPLIFIER**

**Zero Temperature Stability**

±1.2 μV/°C RTI, ±100 μV/°C RTO, after 30-minute warm-up

**Gain Accuracy and Stability**

0.1% ±100 ppm/°C

**Common-Mode Rejection (DC to 5 Hz)**

100 dB typical

**Common-Mode Voltage**

±10V

**System Noise (Normal Mode Operation)**

±10 μV typical (±4 ADC counts)

**MEASUREMENT RANGE**

±81.9 mV

**RESOLUTION**

2.5 μV

**FILTER**

**Type**

Four-pole Butterworth

**Cutoff Frequency (-3 dB)**

5 Hz

**MODEL 5130B HIGH-LEVEL INPUT CARD**

**CHANNELS**

Five per card

**INPUTS**

DC volts (differential)

**Input Impedance**

22 MΩ each input

**Input Protection**

±40V

**Source Current**

±0.5 nA typical; ±5 nA max

**Input Connector**

Nine-pin D-sub style

**AMPLIFIER**

**Zero Temperature Stability**

±1.2 μV/°C RTI, ±100 μV/°C RTO, after 30-minute warm-up

**Gain Accuracy and Stability**

0.1% ±100 ppm/°C

**Common-Mode Rejection (DC to 5 Hz)**

100 dB typical

**Common-Mode Voltage**

±10V

**System Noise (Normal Mode Operation)**

±4 ADC counts typical (0 to 15V excitation)  
±10 ADC counts typical (20 to 30V excitation)

**MEASUREMENT RANGES**

±1, ±2, ±5, ±10 VDC

**RESOLUTION**

30.5, 61, 152.5, 305 μV

**EXCITATION**

0, 0.5, 1.0, 2.0, 5.0, 10.0, 15.0, 20.0, 25.0 and 30.0 VDC

**Accuracy**

±10 mV typical

**Current**

250 mA max (50 mA per channel) at 1 to 15V  
200 mA max (40 mA per channel) at 20V  
150 mA max (30 mA per channel) at 25 to 30V  
Over-current protected  
Max current limit selected by jumpers

**Load Regulation**

<0.05% of full scale for a load variation of 10% to 100% of full load

**Temperature Stability**

Better than ±0.005%/°C

**FILTER**

**Type**

Four-pole Butterworth

**Cutoff Frequency (-3 dB)**

5 Hz

## StrainSmart® Data Acquisition System

### MODEL 5140A LVDT INPUT CARD

#### CHANNELS

Five per card

#### INPUTS

Three- to six-wire transducers

#### Input Impedance

10 M $\Omega$  each input

#### Input Protection

$\pm 40V$

#### Source Current

$\pm 0.5$  nA typical;  $\pm 5$  nA max

#### Input Connector

Nine-pin D-sub style

#### AMPLIFIER

##### Zero Temperature Stability

$\pm 1.2$   $\mu V/^{\circ}C$  RTI,  $\pm 100$   $\mu V/^{\circ}C$  RTO, after 30-minute warm-up

##### Gain Accuracy

0.25% typical

##### Common-Mode Rejection (DC to 5 Hz)

100 dB typical

##### Common-Mode Voltage

$\pm 10V$

##### System Noise (Normal Mode Operation)

$\pm 4$  ADC counts typical

##### Measurement Ranges

$\pm 0.5$ ,  $\pm 1$ ,  $\pm 2.5$ ,  $\pm 5$  VRMS

#### RESOLUTION

15.25, 30.5, 76.2, 152.5  $\mu$ VRMS

#### CALIBRATION

Excitation sample

#### EXCITATION

3.0 VRMS, 5000 Hz or 2500 Hz sine wave

Software-selectable

#### Accuracy

$\pm 5$  mVRMS typical

#### Current

$\pm 250$  mA max ( $\pm 50$  mA per channel)

Over-current protected

#### Load Regulation

$< 0.1\%$  of full scale for a load variation of 10% to 100% of full load

#### Temperature Stability

Better than  $\pm 0.05\%/^{\circ}C$

#### FILTER

##### Type

Four-pole Butterworth

##### Cutoff Frequency ( $-3$ dB)

5 Hz

#### CONFIGURATIONS

StrainSmart Data Systems can be configured in a variety of ways to meet the specific requirements of each user. Each system consists of (1) software, (2) instrumentation hardware, and (3) personal computer.

#### SOFTWARE

It is strongly recommended that StrainSmart Software be installed on a Windows-based personal computer for data acquisition, reduction, display, and storage.

*While the hardware for StrainSmart Data Systems may be used with third-party data acquisition software, total system operation becomes the user's responsibility when third-party software is used.*

#### INSTRUMENTATION HARDWARE

In addition to a one-time purchase of StrainSmart Software, the initial purchase for each system would normally include one of the following:

##### System 5000 with PCI or PCIe Interface:

Model 5101 PCI or PCIe Interface Card; one or more Model 5100 Scanners; and one or more Model 5110, 5120, 5130, or 5140 Input Cards

#### PERSONAL COMPUTER REQUIREMENTS

In addition to StrainSmart Software and Hardware purchased from Micro-Measurements, the system requires access to a properly configured personal computer. The hardware requirements for StrainSmart are:

- Fast Intel Core-2 Duo or better
- 4 GB of memory or better
- 20 GB of available free space or better
- XGA (1024 x 768) or better

#### STRAINSMART SOFTWARE

StrainSmart Software is designed to function with all System 5000, 6000, and 7000 hardware. It contains everything needed to acquire, reduce, display, and store measurement data, including:

- StrainSmart Main Operating Program
- Offline Data Presentation Program
- Interactive Help System

All components are supplied on CD-ROM along with a utility for installing them.

An unlimited number of installations can be made within your facility with the one-time purchase of a single copy of StrainSmart.

## Disclaimer

ALL PRODUCTS, PRODUCT SPECIFICATIONS AND DATA ARE SUBJECT TO CHANGE WITHOUT NOTICE.

Vishay Precision Group, Inc., its affiliates, agents, and employees, and all persons acting on its or their behalf (collectively, "Vishay Precision Group"), disclaim any and all liability for any errors, inaccuracies or incompleteness contained herein or in any other disclosure relating to any product.

The product specifications do not expand or otherwise modify Vishay Precision Group's terms and conditions of purchase, including but not limited to, the warranty expressed therein.

Vishay Precision Group makes no warranty, representation or guarantee other than as set forth in the terms and conditions of purchase. **To the maximum extent permitted by applicable law, Vishay Precision Group disclaims (i) any and all liability arising out of the application or use of any product, (ii) any and all liability, including without limitation special, consequential or incidental damages, and (iii) any and all implied warranties, including warranties of fitness for particular purpose, non-infringement and merchantability.**

Information provided in datasheets and/or specifications may vary from actual results in different applications and performance may vary over time. Statements regarding the suitability of products for certain types of applications are based on Vishay Precision Group's knowledge of typical requirements that are often placed on Vishay Precision Group products. It is the customer's responsibility to validate that a particular product with the properties described in the product specification is suitable for use in a particular application.

No license, express, implied, or otherwise, to any intellectual property rights is granted by this document, or by any conduct of Vishay Precision Group.

The products shown herein are not designed for use in life-saving or life-sustaining applications unless otherwise expressly indicated. Customers using or selling Vishay Precision Group products not expressly indicated for use in such applications do so entirely at their own risk and agree to fully indemnify Vishay Precision Group for any damages arising or resulting from such use or sale. Please contact authorized Vishay Precision Group personnel to obtain written terms and conditions regarding products designed for such applications.

Product names and markings noted herein may be trademarks of their respective owners.